<b>NISSIN</b>				Con	npatil	oility (	Chart												_										_												_						_			Last	update	e: Jan 202	20	
Canon Cameras																																																						
	EOS R	EOS 1Dx Mark II EOS 1Dx	EOS 1DS Mark III	Mark	EOS 1Ds	EOS 1D Mark IV	EOS ID Mark III FOS 1D	EOS 1D Mark II (N)	EOS 1D Mark II	EOS 5Ds R -	EOS 5Ds -	EOS 5D Mark IV		EOS 5D	EOS 6D Mark II -	EOS 6D	EOS 7D Mark II	EOS 7D	E05 900 -	EUS 800	EOS 60D	EOS 50D	EOS 40D	EOS 30D	EOS 20D	EOS 10D	EOS 77D (9000D) (Rebel T7i)- EOS 76DD (8000D) (Rebel T6c)	EOS 7500 (Kiss X8i) (Rebel T6i) -	200D (Kiss X7i) (Rebel	100D (Kiss X7) (Rebel	650D (Kiss X6i) (Rebe	EOS 600D (Kiss X5) (Rebel T3i)	EOS 550D (Kiss X4) (Rebel T2i)	EOS 500D (Kiss X3) (Rebel T1i)	450D (Kiss X2) (	400D (Kiss Digital	EOS 350D (Kiss Digital N) (Rebel XT)	3000	EOS 3000D EOS 1500D (Kies X90) (Rehel T7)	2 Q	EOS 1100D (Kiss X50) (Rebel T)	EOS 1000D (Kiss F) (Rebel XS)	PowerShot G1X Mark II	PowerShot G1X	PowerShot G11	~	PowerShot G7 / G9 / G10	Powershot G5X Powershot G3X	PowerShot S5 IS	PowerShot SX1 IS	PowerShot SX10 IS	ot	EOS M5 FOS M3	EOS M EOS M
Nissin Model					1 1						1 1													1 1																										1				
MG80 Pro New	•	•		-	-	•	• -		-	-	-	• •	•	-	•	•	•	•	- (	• •		•	•	-	-	- (	• •			• •	•	•	•	•	•	-	-	- (	• •	•	•	•	0	0	0	0	0 (	0 0		0	0	0 (	0 0	) ()
Air 10s Commander	•			-	-	•	• -		-	-	-	•	•	-	•	•	•	•	- (	•		•	•	-	-	- (	• •				•	•	•	•	•	-	-	- (	• •	•	•	•	0	$\circ$	0	0	0 0	0 0	0	$\circ$	0	0 (	0 (	) ()
Air 1 Commander	•	• • • • • • • • • • • • • • • • • • •		•	0	•	• 0	) • *1	•	• *2	• *2	• *2*3	•   •	• *1	0	•	• *2	•	-	3	•   •	•   •	•	• *1	• *1	• *1	•   •	•   •	•   •	•   •	•   •	•	•	•	•	• *1	• *1	• *1	• •	• •	•	•	0	$\circ$	0	0	0 0		0	0	0	0 /	0 (	) 0
Di700 A	•	•	•	•	0	•	• 0	) • *1	•	•	•	•	•	• *1	•	•	•	•	-			•	•	• *1	● *1	•	• •	•		• •	•	•	•	•	•	• *1	• *1	• *1	• •	•	•	•	● *5*8	0	0	• •5*8	0	• 5*8 C	0	0	0	0	0 (	0 0
i60A	•	• •	- 1	_	0	•	• 0		_	•	•	•	• •	•	•	•	•	•		-		• •	•	•	•	•	• •	• •		• •	•	•	•	•	•	•	•	•	• •	•	•	•	-	0	0	-	0 .		- 0	0	0	0 '	. (	• •
i600	•	• •		_	0	•	• 0		-	•	•	•	• •	•	•	•	•	•	- (	• •		•	•	•	•	•	• •				•	•	•	•	•	•	•	•	• •	•	•	•	-	0	0	_	0.		- 0	0	0	0 '	• •	
i40	•			_	0		• 0	•1	•	•	•	•	•	•1	● *3 *9	•	•	•	_ (	•		• •	•	•1	•1	•	• •					•	•	•	•	•	•	•	• •	•	•	•	•	•	•	•	• •	• •	• •	•	•	•	• •	• •
i400	•	.,		<u> </u>	0		• 0	• *1	-	-		*3		*1	*3 *9 •		*4 •	•	_ (	5		-	-	*1	*1	*1		4	_		_	-	-			*1	*1	*1	• •	_	•	-	*5*8	*5*8	*5*8	•5*8 *	5*8 *5	5*8 *5* •	*8 *5*8	*5*8	*5*8	*5*8	*5 *	⊧5 *5 ● ●
		~3	_	+-			_	*1	-	-		*3			*3 *9			-	-	_	_	_	_	*1	*1	*1	*	4		_	-	-	-			-1	*1	*1		_	-		*5*8	*5*8	*5*8	•5*8 *	5*8 *5	5*8 *5*	*8 *5*8	*5*8	*5*8	*5*8	*5 *	5 *5
MF18	•	•		•	•		• •	•	•	_	-		•	-	0		•		• (	_		_	-	-	-	•	0		_			+	-				•	•	• •	-	-	-	0	0	0	0	0 0	0 0		0	0	0 (	0 0	) ()
MG8000 Extreme (discontinued)	0	0		0	0	0	• 0	•	•	•	•	0	•	•	0	-	• *4	•	0 (	) (		•	•	•	•	•	0	4		• •	•	•	•	•	•	•	•	•	0	•	•	•	0	0	0	0	0 0	0 0	0	0	0	0 (	0 0	) ()
Di866 Mark II (discontinued)	0	0		•	0	•	• <	•	•	0	•	0	• •	•	0	•	• *4	•	0 0	) (		• •	•	•	•	•	0	4			• •	•	•	•	•	•	•	•	0	•	•	•	0	0	0	0	0 0	0 0	0	0	0	0 (	0 (	) ()
Di700 (discontinued)	0	•		0	0	•	• <		0	0	0	0	• •	• *1	0	•	• *4	•	0	) (		• •	•	• *1	• *1	• *1	0				• •	•	•	•	•	• *1	• *1	• *1	0	• •	•	•	0	$^{\circ}$	0	0	0 0			0	0	0 /	0 (	) 0
Di600 (fade out model)	0	• •	, C	$\circ$	0	•	• 0	•	•	٠	•	•	, •	•	● *9	● *7	•	•	0	3		•	•	•	•	•	0	•		• •	*6*7		•	•	•	•	•	•	0	•	•	•	$\circ$	0	0	0	• (	0 0	) • *5*8	0	● *5*8	0 (	0 (	) 0

Compatible Model

incompatible Model

No information available. To be confirmed.

\*1 HSS High speed sync. and second-curtain sync not supported

\*2 For using with those Canon camera models, before Binding setting, please set Commander Air 1 to "Mode 2". At the same time, the second curtain sync can not be selected. For details, please refer to Air 1's user manual page8 - Appendix1.

\*3 When using the the first 4 product's serial numbers digits smaller-than the following value : Di600: 6803001 Di700A:6720100001 Air 1:C672100001 an error message would appear on camera display when changing "external flash function setting", but the setting is reflected normally. AF assist lamp function on the flash will not work

\*4 Wireless Slave mode does not support the camera built-in flash as the master function.


\*5 Since those camera built-in flash have not the master function, they should use a optional master remote unit (e.g. Canon ST-E2) to control wirelessly any slave flash eqipped optical slave receiver.

\*6 Zoom head operation not supported.

\*7 The flash charging lamp in the camera viewfinder will not go out.

\*8 Limited by the camera system function, Flash TTL function will be disabled when camera set to M manual exposure mode.

\*9 When shooting in continuous mode, flash exposure of TTL mode may become unstable.

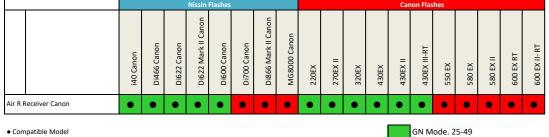

GN Mode. 50-65

<b>NISSIN</b> DIGITAL	Compatibility Chart     22   52     23   54     24   54     25   54     26   53     27   54     28   54     29   54 <th>Last</th> <th>update</th> <th>e: Jan 2(</th> <th>020</th> <th></th>														Last	update	e: Jan 2(	020																																		
Nikon Cameras																																																				
	Z7	Z6	D5 -	D4s	D4	D3x	D3s	D3	D2Xs	D2Hs	D2H	D1	Df	D850 -	D810	D800E	D800	D750	D700	D610	D610	D600	D500 -	D300s	D300	D200	D100	D7500 -	D7200	D7100	D7000	D5600 -	D5500	D5300	D5200	D5100	D5000	D3400 -	D3300	D3200	D3100	D3000	060	D80	D70 / D70s	D60	D50	D40 / D40X	Coolpix A	Coolpix P7700	Coolpix P5100	Coolpix P5000
Nissin Model			-																																										<u> </u>				·	<u> </u>		
MG80 Pro New	•	•	•	•	٠	•	•	•	0	0	0	0	•	•	•	•	•	•	• •		•	•	•	•	•	•	0	-	•	•	•	•	•	•	•	•	•	-	•	٠	•	•	•	-	-	-	-	-	0	0	0	$^{\circ}$
Air 10s Commander	•	•	•	•	٠	•	•	•	0	0	0	0	•	•	•	•	•	•	•		•	•	•	•	•	•	0	-	•	•	•	•	٠	•	٠	•	•	-	٠	٠	•	•	•	-	-	-	-	-	0	0	0	0
Air 1 Commander	-	-	• *1	• *2	• *2	•	٠	٠	0	0	0	0	•	• *5	•	•	•	•	•	•	•	•	•	•	•	•	0	•	•	•	•	-	٠	•	٠	•	•	•	•	٠	•	•	•	0	0	0	0	0	0	0	0	0
Di700 A	•	•	•	•	٠	•	٠	٠	0	0	0	0	•	•	•	•	•	•	•		•	•	•	•	•	•	0	•	•	•	•	-	٠	•	٠	•	•	0	•	٠	•	٠	•	•	•	٠	•	•	0	0	0	0
i60A	•	•	٠	٠	٠	•	٠	٠	0	0	0	0	٠	•	•	•	•	•			•	•	•	•	•	•	0	•	•	•	•	•	٠	٠	•	•	•	•	•	٠	•	•	•	•	•	٠	•	•	● *4	● *4	0	0
i600	•	•	•	٠	٠	•	٠	٠	0	0	0	0	•	•	•	•	•	•			•	•	•	•	•	•	0	•	•	•	•	•	•	•	•	•	•	•	٠	٠	•	•	•	•	•	٠	•	•	● *4	● *4	0	0
i40	•	•	•	•	٠	•	٠	•	0	0	0	0	•	•	•	•	•	•	•	•	•	•	•	•	•	•	0	•	•	•	•	•	•	•	•	•	•	•	•	٠	•	•	•	•	•	•	•	•	● *4	● *4	● *4	● *4
i400	•	•	•	•	٠	•	٠	•	0	0	0	0	•	•	•	•	•	•	•	•	•	•	•	•	•	•	0	•	•	•	•	•	•	•	•	•	•	•	•	٠	•	•	•	•	•	•	•	•	● *4	● *4	● *4	● *4
MF18	-	-	•	•	٠	•	•	•	0	0	0	0	•	•	•	•	•	•	•	•	•	•	•	•	•	•	0	•	•	•	•	•	•	•	•	•	•	•	•	٠	•	•	•	•	•	•	•	•	0	0	0	0
MG8000 Extreme (discontinued)	0	0	•	٠	٠	•	•	•	0	0	0	0	•	0	•	•	•	•	•	•	•	•	•	•	•	•	0	•	0	•	•	0	•	•	•	•	•	•	•	٠	•	•	•	•	•	•	•	•	0	0	0	0
Di866 Mark II (discontinued)	0	0	• *3	٠	٠	•	•	•	•	0	0	0	•	0	•	•	•	•	•	•	•	•	•	•	•	•	0	•	•	•	•	0	•	•	•	•	•	•	•	٠	•	•	•	•	•	•	•	•	0	0	0	0
Di700 (discontinued)	0	0	0	٠	٠	•	•	•	0	0	0	0	•	0	•	•	•	•	•	•	•	•	0	•	•	•	0	0	0	•	•	0	•	•	•	•	•	0	•	٠	•	•	•	•	•	•	•	•	0	0	0	0
Di600 (fade out model)	0	0	0	•	٠	•	•	٠	•	0	0	0	•	0	•	•	•	•	•	•	•	•	0	•	•	•	0	0	0	•	•	0	•	•	•	•	•	•	•	٠	•	•	•	•	•	٠	•	•	0	0	0	0

Compatible Model

o Incompatible Model

No information available. To be confirmed.

\*1 Extremely underexposure (about -2EV) appear when Air 1 mounted on D5 to control wirelessly the slave flash and the flash light does not hit the subject directly, such as bouncing or diffusing,


\*2 In D4 · D4s, when manual flash is set, when you shoot continuously and rapidly manually in the Q mode · 1 sheet shooting mode, emission may be missing. Please understand that it is based on specifications.

\*3 At the time of FP flash, it may be underexposed by about 1 stage compared with the genuine strobe

\*4 SD Mode not supported

\*5 Commander / Flash unit may be freeze when camera turn on the electronic shutter mode with mirror up mode. If Commander / Flash unit freezes, remove and re-insert the battery. Turn off the in-compatible function of camera then power on Commander / Flash unit again.

\*6 A firmware update may required in the futur

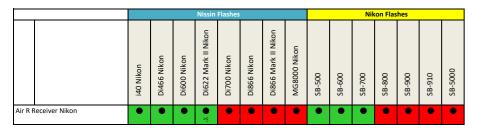

Compatible Model



Air R's GN Mode. 50-65

\*5 FP/HSS high speed sync function not supported

<b>NISSIN</b>		αθ       α/S Mark II       α/S Mark II <th>Last</th> <th>update</th> <th>e: Jan 2</th> <th>2020</th> <th></th>														Last	update	e: Jan 2	2020																																
Sony Cameras		-		_																															_																
	α9 -	α7S Mark II	α7S	IΣ	ā	Mar	α7R -	α7 Mark III -	α7 Mark II	α7	α6500 -	α6400 -	α6300	α6000	α3000	NEX-7	9	Mark	66α	α77 Mark II	α77	α65	α58	α57	α55V	α33	a850	α700	α580	α560	α550	α500	α450	α390	α380	α350	α330	α300	α290	α230	α200	α100	Mai	RX1	RX10	RX10 Mark II	RX10 Mark III -	RX10 Mark IV -	RX100 Mark II	HX400V -	HX60V
Nissin Model																																																			
MG80 Pro New	-	-	•	-	•	•	-	•	•	•	-	•	•	•	$^{\circ}$	-	-	• *4	•	•	-	• *1	-   !	• *1	0	0				- (	0	0	0	-	0	0	0	-	$\circ$	0	0	$^{\circ}$	-	•	•	-	•	•	$^{\circ}$	-	•
Air 10s Commander	•	-	•	•	•	٠	-	٠	•	•	-	•	•	•	0	-	-	•	•	•	-	• *1		• (	0	0				) –	0	0	0	-	0	0	0	-	0	0	0	0	-	•	•	-	•	•	0	_	٠
Air 1 Commander	*4	• *4	•	-	• *4	• *4	•	• *4	• *4	•	• *4	-	•	•	0	● *1	•	• *4	•	• *4	• *1	• *1		• (	0	0		C		0	0	0	0	0	0	0	0	0	0	0	0	0	•	•	•	•	•	•	0	_	•
Di700 A	•	-	•	-	•	•	٠	•	•	•	•	-	•	•	•	•		•	•	•	• *1	•	•	• •	•	•					• *1	● *1	● *]	0	• *1	● *]	● *]	0		• *1	• *1	● *]	•	•	•	•	•	•	•	•	٠
i60A	•	•	•	-	•	•	•	•	•	•	•	•	•	•	•	• *1	•	•	•	•	• *1	• *]	•	•	•	•					• *1	• *1	• *1	0	• *1	• *1	• *1	0	• *1	• *1	• *1	• *1	• *2	•	•	-	•	•	•	•	•
i600	•	•	•	-	•	٠	•	٠	•	•	•	-	•	•	•	● *1	•	•	•	•	● *1	• *1	•	•	•					0	•	● *1	• *1	0	• *1	● *1	● *1	0	• *1	• *1	• *1	● *1	● *7	•	•	-	•	•	•	•	٠
i40	•	•	•	-	•	•	•	•	•	•	•	-	•	•	•	•	•	•	•	•	• •	*1		• •	•	•					*1	*1	*1	0	• • *]	•	• • *1	0	• •	• • *]	• • *1	• • *]	• • *7	•	•	•	•	•	•	•	•
i400	•	•	•	-	•	•	•	•	•	•	•	-	•	•	•	• *1	•	•	•	•	• *1	• *1		• •	•	•				0	*1	*1	*1	0	•	• *1	• *1	0		• *1	• *1	• *1	• *7	•	•	•	•	•	•	•	•
MF18	-	-	•	_	•	•	_	•	•	•	-	-	•	•	● *3	• *1	•	-	•	•	• *1	• *1		• • • • • • • • • • • • • • • • • • •	• • •	• •	1 *1			0	0	0	0	0	0	0	0	0	0	0	0	0	• *2	•	•	•	•	•	0	•	•

mpatible Model

ncompatible Model No information available. To be confirmed.

\*1 Use the Sony Shoe Adaptor (ADP-AMA)

\*2 It slightly interferes (contacts) with the EVF. Since you can not use EVF, it can not be used because diopter correction does not work by interfi

\*3 Optical wireless function are not available.

\*4 For using with those Sony camera models, not support the Air R's HSS High-speed sync function :: α9, α7R Mark III, α7R Mark II, α7S Mark II, α7 Mark III, α7 Mark III, α99 Mark II, α6500



Compatible Model

GN Mode. 25-49

GN Mode. 50-65 \*1 Use the Sony Shoe Adaptor (ADP-AMA)

\*2 Use the Sony Shoe Adaptor (ADP-MAA). Due to the design of the ADP-MAA adapter, bad contact may always occur when using ADP-MAA. Depends on the situation of use, the operation may be unstable.

\*3 For using with those Sony camera models, the HSS High-speed sync function of the flash inserted on Air R can not be used, α9, α7R Mark III, α7R Mark III, α7 Mark III, α7 Mark III, α7 Mark III, α9 Mark II , α6500

Compatibility Chart     Last update: Jan 2020       Dympus Micro Four Thirds / Four Thirds Cameras     Image: Compatibility Chart																										
Olympus Micro Four Thirds / Fou	Thirds C	ameras																								
	E-M1 Mark II (OMD)	E-M1 (OMD)	E-M5 Mark II (OMD)	E-M5 (OMD)	E-M10 Mark III (OMD)	E-M10 Mark II (OMD)	E-M10 (OMD)	PEN-F	E-P5	E-P3	E-P2	E-P1	E-PL8 New	E-PL7	E-PL6	E-PL5	E-PL3	E-PL2	E-PL1	E-PM2	E-PM1	E-620	E-520	E-500	E-410	E-30
Nissin Model			<u> </u>																							<u> </u>
Air 10s Commander New (Four Thirds ver.)	•	•	•	٠	٠	-	•	-	٠	•	•	•	•	-	•	•	-	•	•	•	•	-	-	-	-	-
Air 1 Commander (Four Thirds ver.)	•	•	•	٠	0	•	•	• *1	•	•	•	٠	٠	٠	•	•	•	•	•	•	•	•	•	•	•	•
Di700 A (Four Thirds ver.)	•	•	• *3	٠	0	•	•	• *1	٠	•	•	•	•	•	•	•	•	•	•	•	•	• *2	• *2	• *2	• *2	• *2
i60A (Four Thirds ver.)	•	•	• *1	٠	0	•	٠	● *1	•	•	•	٠	٠	٠	٠	٠	•	•	•	•	•	• *2	• *2	• *2	• *2	• *2
i600 (Four Thirds ver.)	•	•	• *1	٠	0	•	٠	● *1	•	•	•	٠	٠	٠	٠	٠	•	•	•	•	•	• *2	• *2	• *2	• *2	• *2
i40 (Four Thirds ver.)	• *1	•	• *1	٠	● *4	•	٠	• *1	•	•	•	٠	٠	٠	٠	٠	•	٠	٠	•	•	• *2	• *2	• *2	• *2	• *2
i400 (Four Thirds ver.)	• *1	•	• *1	٠	● *4	•	٠	• *1	•	•	•	•	٠	•	•	•	•	•	٠	•	•	• *2	• *2	• *2	• *2	• *2
Di466 (Four Thirds ver.)	-	•	0	•	_	0	•	0	•	•	•	•	_	0	•	•	•	•	•	•	•	•	•	•	•	•

Compatible Model

o Incompatible Model

1

No information available. To be confirmed.
\*1 Unstable operation may appear when turn on the S-OVF Function ( Optical view finder simulation ) of EVF and shoot with EVF.

\*2 Flash's optical slave wireless mode is incompatible with camera's wireless flash system.

\*3 Di700A for FT version will be supporting Olympus E-M5 Mark II after flash firmware updated.

\*4 Hardware compatible on or above the following Serial Number: i40: 8A18XXXXXXX~ i400:8927XXXXXXX~

ark II / GX85 / GX80																									
D I G I T A L   D I G I T A L     Panasonic Micro Four Thirds Cameras *4     Image: Colspan="2">Image: Colspan="2" Image: Col																									
Panasonic Micro Four Thirds Cam	eras *4																								
	GH5	GH4	GH3	GH2	GH1	GX8	GX7	/ GX85 /	GX1	G10	69		G7 / G70	G6	G5	G3	62	G1	GF2	GF1	LX100	LX7	LX5	LX3	FZ200
Nissin Model																							<u> </u>		
Air 10s Commander New	•	_	•	-	•	_	•	-	-	-	•	_	-	•	-	_	•	•	•	•	-	•	•	•	•
Air 1 Commander	•		•		•	•	•	•		•		•	•	•	•		•	•	•	•	•	•		•	
(Four Thirds ver.)	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
Di700 A (Four Thirds ver.)	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
i60A	•		•		•	•	•	•	•	•			•	•	•		•			•	•	•			•
(Four Thirds ver.)	•	_	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	<b>_</b>	•	-
i600 (Four Thirds ver.)	•	-	٠	٠	•	٠	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
i40	•		•		•	•	•	•		•	•	•	•	•	•		•		•	•	•	•		•	•
(Four Thirds ver.)	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	-	•	•	-	•	•	•	-	•	<b>_</b>
i400 (Four Thirds ver.)	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
Di466 (Four Thirds ver.)	-	•	•	•	•	0	٠	0	٠	٠	-	_	0	٠	٠	•	•	•	٠	•	•	•	•	•	•

Compatible Model

Incompatible Model

No information available. To be confirmed. \*4 According to the specifications of Panasonic Lumix series, the continuous shooting function cannot be used when an external flash is installed on the hot shoe.

Simulation   Simulation																														
Fujifilm Cameras																														
	GFX 50s	X-H1	Х-ТЗ	Х-Т2		Х-Т20	X-T10	X-Pro2	X-Pro1	X-E3	X-E2S	X-E2	X-E1	X-M1	X-A5	X-A3	X-A2	X-A1	X100F	X100T	X100S	X100	X70	X30	X20	X10	X-S1	HSSOEXR	HS30EXR	HS20EXR
Nissin Model																												<u>.                                    </u>		
Air 10s Commander	-	•	•	• *1	• *1	•	•		•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	-
Air 1 Commander	• *1 *2	•	•	• *1	• *1	•	•	• *1	•	٠	•	•	•	٠	0	٠	•	•	•	•	•	•	•	•	•	•	•	•	•	0
Di700 A		•	•	• *1	• *1	•	•	• *1	•	٠	•	•	•	٠	٠	٠	•	•	•	•	•	•	•	•	•	•	•	•	•	0
i60A	• *1 *2	•	•		● *1	•	•	● *1	•	٠	•	•	•	٠	٠	٠	•	•	٠	•	٠	•	•	٠	٠	•	•	•	•	0
i600	• *1 *2	•	•	• *1	• *1	•	•	• *1	•	٠	•	•	•	•	•	٠	•	•	•	•	•	•	•	•	•	•	•	•	•	0
i40	• *1 *2	•	•	• *1	• *1	•	•	• *1	•	٠	•	•	•	•	0	0	•	•	•	•	•	•	•	•	•	•	•	•	•	0
i400	• *1 *2	•	•	● *1	● *1	•	•	● *1	•	٠	•	٠	٠	٠	0	0	•	٠	•	٠	•	•	٠	٠	٠	•	•	•	•	0

Compatible Model
Incompatible Model

\*1 The Fujifilm camera is supporting of High speed synchronize function.
\*1 The Fujifilm camera is supporting of High speed synchronize function after camera firmware updated
\*2 Flash can be insert on the hot shoe of main body or that of EVF. When inserted a flash on the EVF shoe, do not tilt-up EVF since this may make the EVF damage.